


Motorola Minitor V

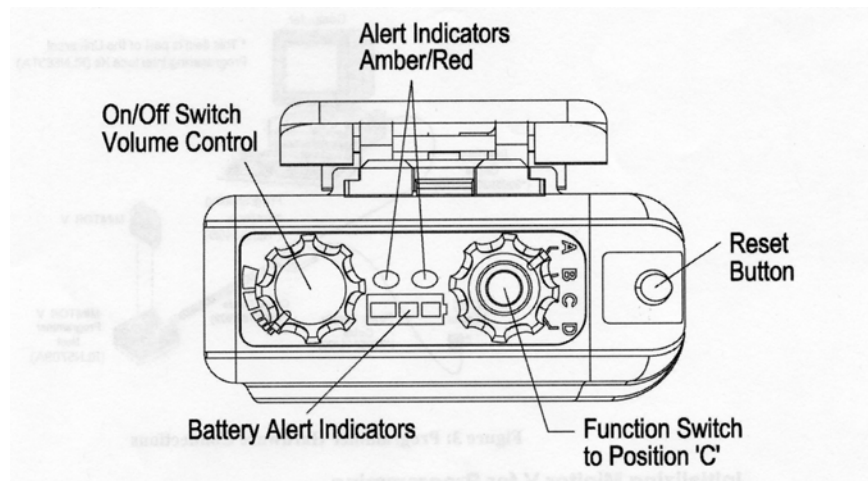

A – Monitor South

B – Monitor North

C – Scan South & North (Silent until paged. Beeps & vibrates when paged.)

D – Scan South & North (Silent until paged. Vibrates when paged.)

Voice record will capture the dispatcher's voice (up to 120 seconds in length) after it receives a page. It stops recording after the dispatcher stops transmitting. To replay recording press the top of the "function switch" knob. As new pages occur, it automatically erases the oldest messages when the two-minute capacity is reached.

If there are unread voice recordings, a red LED will be lit.

Pressing the reset button silences the radio (when set to "C" or "D") until a new page is received.

Voice recordings are erased when the pager is turned off.